

Certification Tag Fitting Guidelines

Introduction

Please find enclosed tags, also referred to as certifying labels, for fitment to the specified doorsets or windows.

The tags are self-adhesive. To fit the tags, ensure the surfaces are clean and dry, and simply remove the backing paper and press firmly into position for a secure bond. Tags can also be mechanically fixed at your discretion.

The quantity and placement of tags vary by product type. The correct number of tags have been supplied. Please refer to the section in this booklet that applies to your product type.

TAGS MUST ONLY BE FITTED TO THE CORRECT DOORSETS OR WINDOWS.


Also enclosed are copies of the respective Installers' Declaration forms for your records and reference.

Fire Register

Fire registers, as required under NZS 4520:2010, 6.4.3, are available on request. Please contact your Project Coordinator if you have not received one.


Hinged Doors

For side-hung doorsets, fit one tag to the hinge edge of the door leaf at approximately 1500 mm above floor level, and one tag to the door frame rebate, offset from the door leaf tag. Each leaf of two-leaf (paired) doorsets must be tagged.

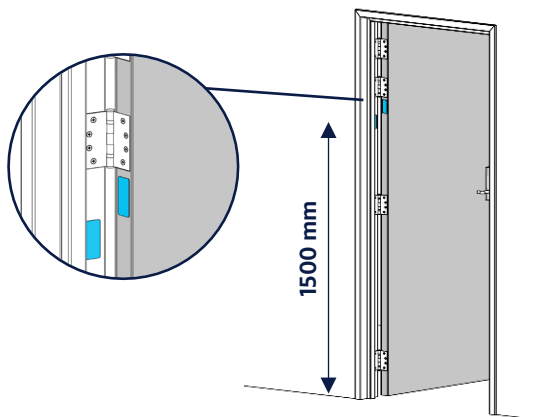


Double Action Doors

For double-action doorsets, fix one tag to the face of the door leaf at the top pivot corner, and one tag to the door frame (in a position that does not impede the operation of the door), at approximately 1500 mm above floor level. Each leaf of two-leaf (paired) doorsets must be tagged.

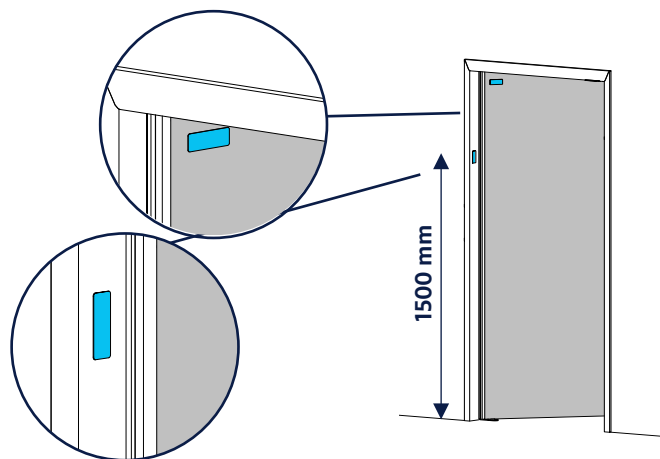


Cavity Sliding Doors

For cavity sliding doorsets, fix one tag to the leaf face at the top leading edge corner, and one tag to the door frame (in a position that does not impede the operation of the door), at approximately 1500 mm above floor level.

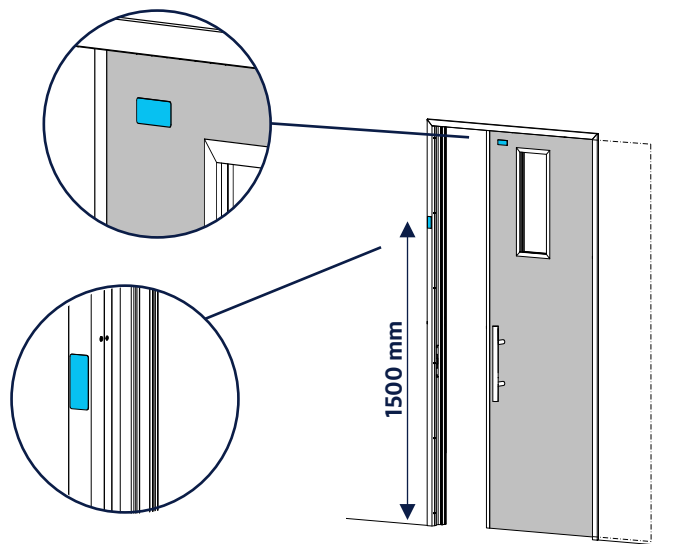


Face Mounted Sliding Doors

For face mounted sliding doorsets, fix one tag to the trailing edge of the door leaf at approximately 1500 mm above floor level and one tag to the flame trap at approximately the same height.

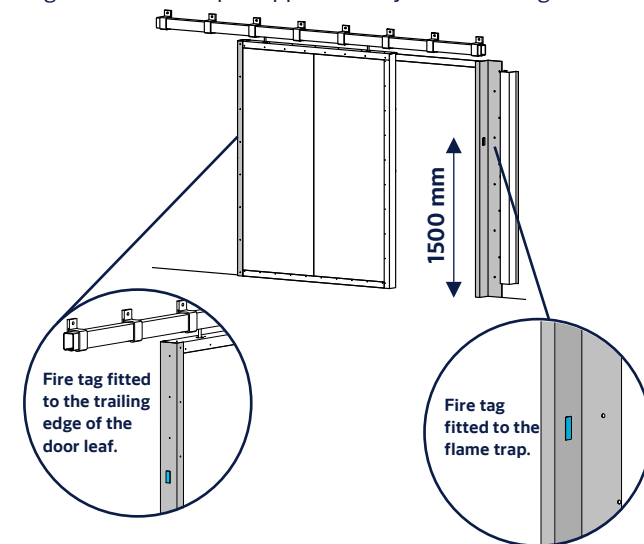

Windows

For windows, tag to be to the interior side, preferably located at a top corner of all window frames or other reasonable yet visible location.

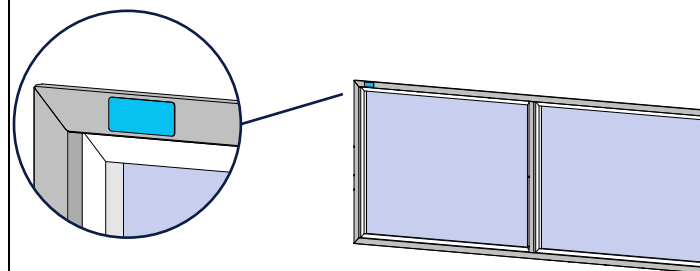

Support

If you have any questions, please contact your project coordinator or sales.pacificdoors@assaabloy.com. To assist with identification, please quote either the Project reference number (e.g. PC00012345), located in the top right-hand corner of the Installer's Declaration and/or Job number (e.g. 654321), located on the tag, or written on the top edge of the door leaf in vivid marker.